

BRAKE SHOE DIAGRAMS - 15" Diameter

EATON




SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #
XSS1308	1308	15.00 x 4.0	1308	1005836	1005840
XSS1308K					

H.W. KIT
SSKIT21

REMARKS
Lining is of uniform thickness along entire length
2.75" rivet spacing

Eaton Extended (ESII) 15"x4" Front Brake Shoe
(used in applications since 1995)
NOTE: Has to be used with the extended service camshaft

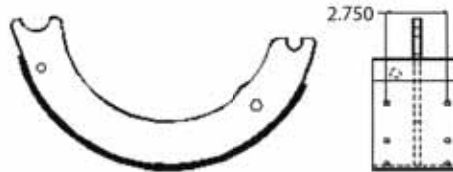

EATON EXTENDED SERVICE



SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #
XES40177K	40177	15.00 x 4.0	1443TT	807686	807685

H.W. KIT
SSKIT21
(Included)

REMARKS
Tapered lining along both ends
2" rivet spacing

Eaton 15"x4" Front Brake Shoe
(used in early applications)




BRAKE SHOE DIAGRAMS - 15" Diameter

WAGNER



SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
XSS455	455	15.00 x 3.5	1279	FE83177	FE32462	E2740	Steer Axle Brake

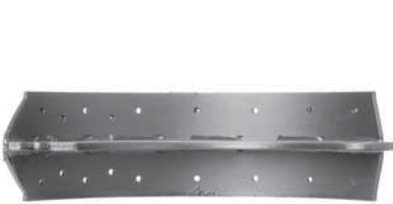

SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
XSS426	426	15.00 x 4.0	26-1308A	FE80426	N/A	E3291	Steer Axle Brake Web Height: 2-23/32" Web Thickness: 5/16"



SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
XSS458	458	15.00x4.0	58-1308A	FE88633	N/A	E3291	Steer Axle Brake Web Height: 2-15/32" Web Thickness: 5/16"

BRAKE SHOE DIAGRAMS - 15" Diameter

WAGNER



SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
XSS512	512	15.00 x 4.0	1308A	FE100307	N/A	E3291	Mack Steer Axle Brake



SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
XSS6595	4595	15.00 x 7.0	4595	FE31965	N/A	E2713	Drive Axle Brake


MERITOR STOPMASTER WEDGE





SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
XSS4615	4615	15.00 x 5.0	4615	222-P-1420	FE32462	Minor: E2525A	Drive or Trailing Axles

BRAKE SHOE DIAGRAMS - 15" Diameter

MERITOR STOPMASTER WEDGE

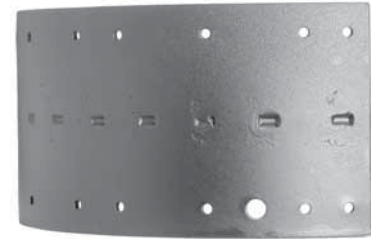

SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
XSS4605	4605	15.00 x 6.0	4605	3222-P-1420 3222-L-350	3722-P-354 3722-U-359	Major: E2523A (RH) Major: E2524A (LH)	N/A

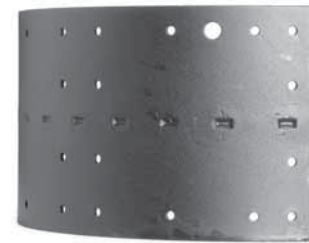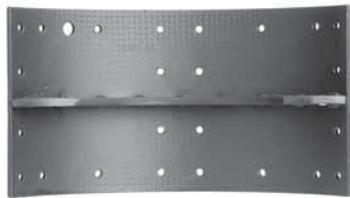

SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
XSS4602	4602	15.00 x 7.0	4602	3222-P-1420	3722-Q-3555	6" & 7" Minor: E2158 (both) Major: E2157 (both)	Dual Actuators

BENDIX WEDGE



SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
XSS6997	6997	15.00 x 6.0	4506	316997	316417	Minor: E2158 Major: E2157	N/A



SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
XSS6998	6998	15.00 x 7.0	4602	316997	4602B	Minor: E2158 Major: E2157	Special Order

BRAKE SHOE DIAGRAMS - 15" Diameter

MERITOR Q



SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
XSS1982	1982	15.00 x 4.0	1308T	3222-P-1420	3722-Q-355	SSKIT22	Steer Axle Brake

MERITOR Q PLUS



SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
XSS4702 XSS7010	4702	15.00 x 4.0	4702	3222-B-2018 3222-F-21641 3222-M-2223	N/A	KIT8824HD	Q-Plus Steer Axle Brake




SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
XSS4703	4703	15.00 x 5.0	4703	3222-B-2108	3222-R-1968	KIT8824HD	Meritor Q-Plus stamped on web




SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
N/A	4704	15.00 x 6.0	4704	3222-B-2108	3222-E-1955	KIT8824HD	Special Order

BRAKE SHOE DIAGRAMS - 15" Diameter



MERITOR Q PLUS

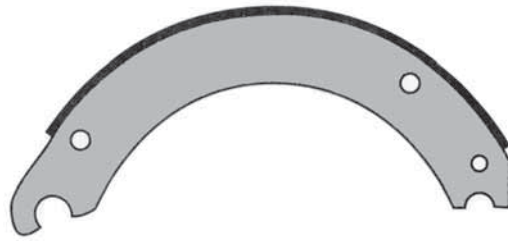

SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
XSS4705K	4705	15.00 x 7.0	4705	3222-B-2108	3222-X-1948	KIT8824HD (Included)	Special Order

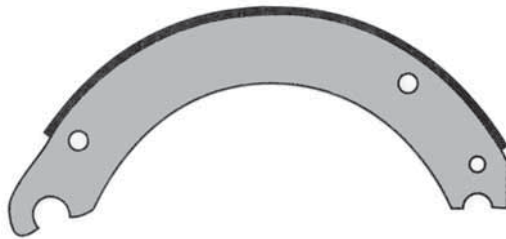

SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
XSS4706K	4706	15.00 x 8.0	4706	3222-B-2108	N/A	KIT8824HD (Included)	Special Order

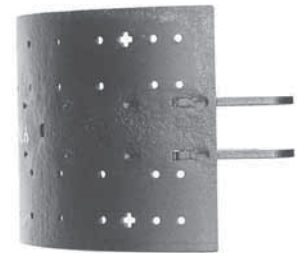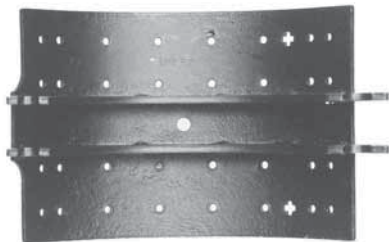

SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
XSS4710	4710	15.00 x 8.62	4710	3222-B-2108	N/A	KIT8824HD	Special Order cannot interchange w/ 4710IMT shoe. (XSS4710IMT)



IMPORTANT NOTICE



As per the picture above, the 4710 IMT shoe, the table has been repositioned. What this means is that the circle (drum diameter) is the same as the Meritor 4710, but by repositioning the table it has changed the contact points of the shoe assembly. The Meritor shoe will fit onto a IMT brake spider, but the drum will not be able to be installed. The IMT shoe can be installed on a Meritor brake spider, but the drum will not be able to be installed.

4710 IMT shoe only fits on a IMT axle. 4710 Meritor shoe only fits on a Meritor axle. There is approximately 1/2" difference on the position.

BRAKE SHOE DIAGRAMS - 15" Diameter

MERITOR T



SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
XSS1103	1103	15.00 x 3.5	1307	3222-S-1085 3222-B-1094	N/A	E4691	Steer Axle Brake



SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
XSS1072	1072	15.00 x 4.0	1308	3222-S-1085 3222-B-1094	322-M-1079	E4691	N/A


EATON ESII





SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
XSS4729K	4729II	15.00 x 4.0	4729	974583A1	974587	E11981 (Included)	Double Web

BRAKE SHOE DIAGRAMS - 15" & 16.5" Diameter

BENDIX "S" CAM BRAKE

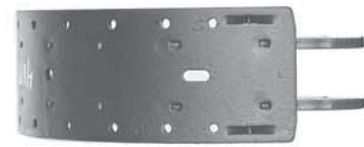

SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
XSS4693	4693	15.00 x 4.0	4693	N/A	2259431	E7232	Ford Cargo Front

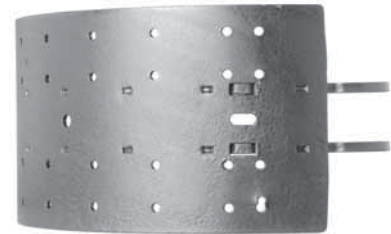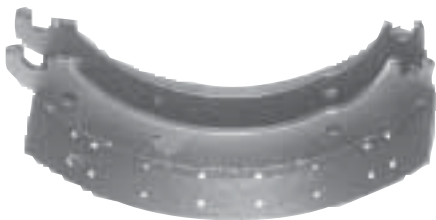

SS PART #	CORE #	SIZE	FMSI	WEB #	TABLE #	H.W. KIT	REMARKS
XSSB3449	B449	16.50 x 7.0	4515C	A07793A4 G05593B2	C1 0393B1 4515	E7238	Cannot interchange /w Meritor-Q Brakes

